BATHTUB OPERATING INSTRUCTIONS



FUNCTIONS



() ON/OFF

Press the On/Off key to start or to stop the turbine and the control panel.

ADJUST AIR JET PRESSURE

Air jet pressure can be adjusted for maximum comfort and a remarkably effective massage. Default pressure is set to 60%. Increase or decrease the pressure of the air jets by repeatedly pressing the up or down keys until the desired intensity is reached.

- So TO ACTIVATE THE DRYING CYCLE

This function completely drains the conduits and dries them for 90 seconds, regardless of whether or not the system was activated. By eliminating any water left in the conduits, the **drying cycle** ensures perfect hygiene.

- No stagnant water
- No water left over from the previous bath

To activate the **drying cycle**, press \leq ^(b). The operation will cease after 90 seconds. If you do not activate the function, the drying process will begin automatically after 15 minutes. If the bath is used for soaking only, activate the drying cycle manually by pressing $\leq \delta$. You can use the **drying cycle** function immediately after a Hydro-Thermo Massage[™] session or whenever you wish.

BATHTUB OPERATING INSTRUCTIONS



FUNCTIONS



ON/OFF

Press the On/Off key to start or to stop the turbine and the control panel.

ADJUST AIR JET PRESSURE

Air jet pressure can be adjusted for maximum comfort and a remarkably effective massage. Default pressure is set to 60%. **Increase or decrease the pressure** of the air jets by repeatedly pressing the up or down keys until the desired intensity is reached.

TO ACTIVATE THE DRYING CYCLE

This function completely drains the conduits and dries them for 90 seconds, regardless of whether or not the system was activated. By eliminating any water left in the conduits, the **drying cycle** ensures perfect hygiene.

- No stagnant water
- No water left over from the previous bath